BLUEBOAT WIRING DIAGRAM -PORT HULL-- STARBOARD HULL-V1 = BattV V2 = 5V 2.4 Ghz ROUTER 6-CIRCUIT FUSE | BOARD V1 = BattV MES FULL SE BATTERY BATTERY V2 = 5V BATTERY BATTERY 8 L S 8 1001 FUEE 60A BATTERY BATTERY BATTERY BATTERY CROSSTUBE M200